

Slim Hand-scan Induction-dimmable Cabinet light

Product Photo



Features :

- ※ Slim, streamlined design, the thickness of only 9mm,
- ※ High sensitivity sensor switch :hands under the switch scan, the lights on, then once again ,the lights off.
- ※ Dimmable function: Hands touch for more than one second at the touch switch can adjust the brightness(1%-100%)
- ※ Built-in buckle installation, convenient;
- ※ Free wires outlet at both ends,pluggable connection mode, convenient and beautiful
- ※ **Using double and efficiency LED light source, emitting more uniform and soft;**



采用手扫感应开关

Built-in photoelectric hand scan induction switch

采用进口光电感应开关
感应距离6-10CM内
手扫灯亮，再扫灯灭
彻底解放您的双手

Switch operation instructions:

- 1) The power light is on and the lamp is turned off, the first time, hand scan ,the lamp is half-bright (brightness50%).
- 2) In the light of the state , hand scan once again ,the lamp off; in the light of the state and your hand scan the switch up regulation of light in a long time to increase the brightness ,until the brightest.
- 3) After a long time hand scan dimmer, once again, but with the last light in the opposite direction dimmer, down regulation of light in a long time to decrease the brightness, until the darkest.
- 4) Released during the dimmable process or stopped the dimmable action, the lamp will keep the current brightness.
- 5) After adjusting the brightness, a short hand scan, the lamp is off; Hand scan the light again, the lamp enters the

brightness of the shutdown.

Temperature Characteristics

25℃ Ambient Temperature		
Temperature	Humidity	
Operating -20~+40℃	Operating	10%-80%
Storage -40~+85℃	Storage	10%-80%

Electrical Characteristics

Input Voltage: DC12V

Technical Parameters:

Model No.	Power (W)	Switch	Body Material	LED type	LED Qty (pcs)	CCT (K)	Lumens (lm)	CRI (Ra)	Size (mm)
OLM.SZAF.R.BN.5W-300	5	Hand-Scan Induction	Aluminum	2835	30	4000-4500	380±10%	80	300*40*10.5mm
OLM.SZAF.R.BN.9W-600	9	Hand-Scan Induction	Aluminum	2835	66	4000-4500	680±10%	80	600*40*10.5 mm

CCT Range: WW: 2700-3200K , NW: 4000-4500K , CW: 5800-6500K

Product Applications:

Cabinets, Wardrobes, Closet, Nightstand, Desk





Installation instructions


1. Using two metal mounting clips with screws on the installation position, and the two metal mounting clips are in the same level.
2. Insert the cabinet lamp on the metal mounting clips..
3. Connect the power cord to the power supply.



2 -in-1 Blister Kit :

Item	Strip light	Adapter	Junction box	1m Mid-connect wire	1.5M Input wire	Clips	Screw
Quantity (PCS)	1	1	1	1	1	2	4
No.	①	②	③	④	⑤	⑥	⑦

Installation:

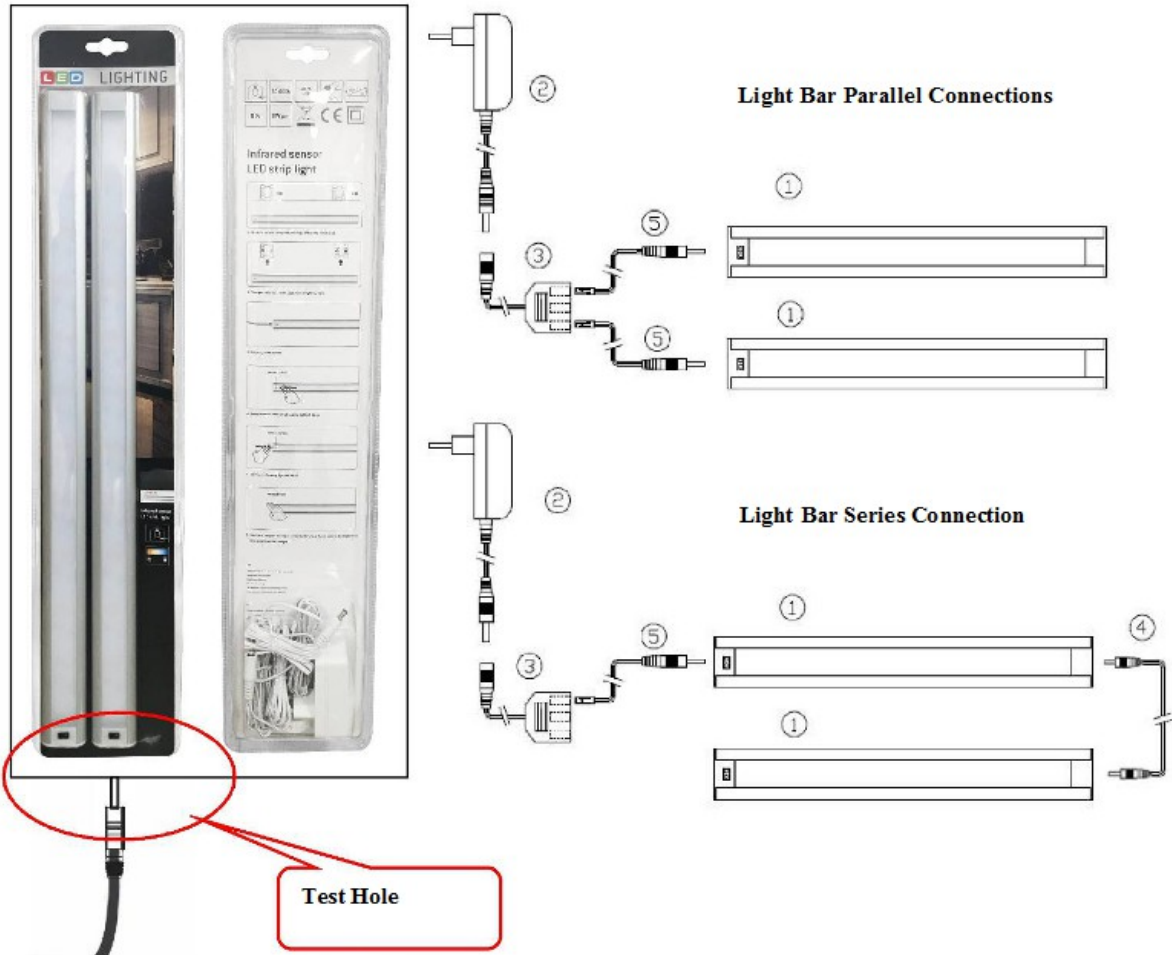

Packaging Guide

Model No.	PCS/CTN	Carton Size /CM
OLM.SZAF.R.BN.5W-300	20 Kits/ Ctn	44*37*31CM
OLM.SZAF.R.BN.9W-600	20 Kits/ Ctn	70*31*31CM

