



LLC SPI Click

PID: MIKROE-3298 Weight: 24 g


The LLC SPI click is a very useful Click board[™] which can be utilized as the level converter for logic signals. The topology of this logic level conversion (LLC) circuit is perfectly suited for SPI communication between devices with unmatched voltages of their logic signals. Although there are some specialized integrated circuits on the market, sometimes it is more convenient to have a simple solution made of just a few passive elements and four MOSFETs.

It comes in the package which also includes the mikroSDK[™] software and a library with all the functions. The Click board[™] comes as a fully tested and approved prototype, making it a reliable device ready to use on the development board.

Besides this, MOSFETs can withstand up to 20V across their terminals (12V VGS), and supports far greater currents than the typical ICs, making them less likely to fail. The LLC circuitry, also known as the level translator or level shifter, can be used in virtually any application that utilizes the SPI communication protocol and needs matching between logic voltage levels.

How does it work?

LLC I2C click does not use any integrated circuit, as already mentioned. With ICs avoided completely, there are some benefits gained: the overall cost of the LLC circuit is greatly reduced, a more robust MOSFET solution reduces the failure rate, and when powered off, both the low voltage and the high voltage sides are isolated from one another (by non-conductive MOSFETs). This type of circuit is sometimes referred to as a level shifting or level translating circuit and it is often necessary when one SPI device (typically a sensor IC) uses different logic voltage levels for the communication than the controller device, which is a microcontroller (MCU) in most cases. The conversion of this circuitry is bi-directional, which makes it suitable to be used with the SPI communication protocol.

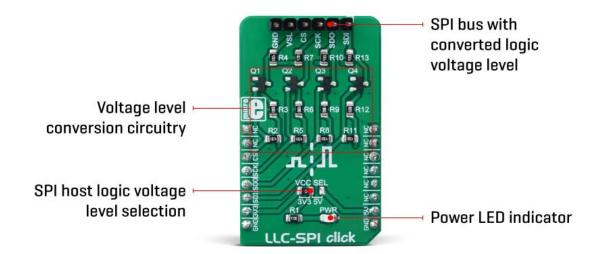

The SPI protocol was first introduced by Motorola, in the '80s. The circuit is divided into low-side and high-side sections for future reference, however, both up-shifting, and down-shifting of the voltage level is possible. The mechanisms are slightly different, so each will be explained separately.

Up-shifting:

1. When there is a HIGH logic level on a low-side SPI line, both the gate and the source voltage of the MOSFET will be equal. This will turn OFF MOSFET since there is no gate-source voltage difference (e.g. VG=VS=VREF), while the pull-up resistor will pull the high-side SPI pins to a HIGH logic level.

2. When the low-side SPI line is driven to a LOW logic level, it will drive the source terminal of MOSFET to a LOW logic level, too. Since the gate is set to

a fixed voltage value of the low-side voltage reference, a potential difference will form between the gate and the source terminal, causing the VGS voltage to appear. When this voltage raises above the gate threshold voltage (1.2V typically for the used transistors), the MOSFET will turn ON, conducting current through the high-side resistor, effectively bringing SPI pins on both low-side and high-side down to a LOW logic level.

Down-shifting:

1. When there is a HIGH logic level on a high-side SPI line, both the gate and the source voltage of the MOSFET will be equal, just like in the Upshifting scenario.

2. When a high side SPI line is driven to a LOW logic level, it will drive the drain terminal of the MOSFET to a LOW logic level. Since the source of the MOSFET remains at the HIGH logic level (pulled up by a resistor), current will flow through the body diode of the MOSFET. In turn, the source-drain voltage (VSD) will drop towards the forward voltage of the MOSFET body diode. The lowered potential of the source terminal will result in forming the VGS voltage, ultimately turning ON MOSFET. From this moment, the MOSFET conducts the current, effectively bringing SPI pins on both low-side and high-side down to a LOW logic level. However, there is one condition in this case: the VGS voltage, which is equal to voltage of the low-side reference minus the forward voltage drop across the body diode, needs to be sufficient to allow turning MOSFET ON.

VGS = VLS - VSD VGS > VTH

The reference voltage for the high-side can be selected by using the SMD jumper labeled as VCC SEL. The pull-up voltage for the high-side can be selected from the mikroBUS[™] power rails, so it can be either 3.3V or 5V. For the low-side, an arbitrary reference voltage can be applied to the VSL pin of the J1 header, respecting the maximum voltage rating, as well as the condition mentioned above. J1 is the standard, 2.54mm pin-header. The low-side SPI related pins are also routed to the J1 header, allowing an external device to be connected (using the standard wire-jumpers). As already mentioned, the low-side can actually use higher voltage levels than the master, but in most usage scenarios, it will be lower than the master, thus the terminology used in the text above.

Specifications

Туре	Port expander					
Applications	SPI logic level conversion circuit has its use in many different projects. It is used for the SPI logic voltage level matching between the host and the device					
Key Features	Very low cost achieved using only passive elements, and four MOSFETs, ability to use an arbitrary voltage level conversion in the range from 1.2V up to 10V					
Interface	SPI					
Input Voltage	3.3V or 5V					
Compatibility	mikroBUS					
Click board size	M (42.9 x 25.4 mm)					

Pinout diagram

This table shows how the pinout on **LLC SPI Click** corresponds to the pinout on the mikroBUS^M socket (the latter shown in the two middle columns).

Notes	Pin	● ● mikro ● ● ● BUS				Pin	Notes
	NC	1	AN	PWM	16	NC	
	NC	2	RST	INT	15	NC	
SPI Chip Select	CS	3	CS	RX	14	NC	

SPI Clock	SCK	4	SCK	ТΧ	13	NC	
SPI Data OUT	SDO	5	MISO	SCL	12	NC	
SPI Data IN	SDI	6	MOSI	SDA	11	NC	
Power supply	3V3	7	3.3V	5V	10	5V	Power supply
Ground	GND	8	GND	GND	9	GND	Ground

Onboard jumpers and settings

Label	Name	Default	Description
PWR	PWR	-	Power LED indicator
VCC SEL	VCC SEL	Left	SPI host logic voltage level selection: left position 3.3V, right position 5V
J1	-	-	SPI bus with the converted voltage level

Software support

We provide a library for the LLC SPI click on our LibStock page, as well as a demo application (example), developed using MikroElektronika compilers. The demo can run on all the main MikroElektronika development boards.

Library Description

The library contains functions for writing data to SPI wires and reading data from SPI wires.

Key functions:

• void spillc_setCS(uint8_t state) - Function for set CS pin state.

- void spillc_write(uint8_t *pBuf, uint16_t nBytes) Function executes write sequence of n bytes.
- void spillc_read(uint8_t *pBuf, uint16_t nBytes) Function executes read sequence of n bytes.
- void spillc_transfer(uint8_t *pIn, uint8_t *pOut, uint16_t nBytes) Function should executes read/write sequence of n bytes.

Examples description

The application is composed of the three sections :

- System Initialization Initializes SPI module and sets CS pin as OUTPUT
- Application Initialization Initialization driver init
- Application Task (code snippet) Counter passes through the loop and logs the value of the counter on the bargraph display

Note - Connection between BarGraph and SPI-LLC is made through SPI interface. You can connect a BarGraph click and SPI-LLC click with the wires to make the connection between click boards. We use the BarGraph click to demonstrate the functions of the SPI-LLC click.

```
void applicationTask()
{
    uint16_t convert;
    uint8_t tmp[2];
    uint8 t cnt;
   // BarGraph display
   for (cnt = 0; cnt <= 10; cnt++)</pre>
    {
        convert = (uint16 t)((1 \ll cnt) - 1);
        tmp[1] = (convert \& 0x00FF);
        tmp[0] = (convert \& 0xFF00) >> 8;
        spillc_setCS(0);
        spillc_write(&tmp[0], 2);
        spillc setCS(1);
        Delay_ms( 1000 );
    }
}
```

The full application code, and ready to use projects can be found on our LibStock page.

Other mikroE Libraries used in the example:

• I2C

Additional notes and information

Depending on the development board you are using, you may need USB UART click, USB UART 2 click or RS232 click to connect to your PC, for development systems with no UART to USB interface available on the board. The terminal available in all MikroElektronika compilers, or any other terminal application of your choice, can be used to read the message.

mikroSDK

This click board is supported with mikroSDK - MikroElektronika Software Development Kit. To ensure proper operation of mikroSDK compliant click board demo applications, mikroSDK should be downloaded from the LibStock and installed for the compiler you are using.

For more information about mikroSDK, visit the official page.



https://www.mikroe.com/llc-spi-click/1-9-19